

Setting up a Logenex Teleport Door Station for an IP phone system (SIP Server)

Article Number: 22 | Rating: Unrated | Last Updated: Thu, Jun 2, 2016 at 12:10 PM

Products included:

Teleport Door Station (i.e. TP-202XVC)

Teleport Door Controller (i.e. TPC)

SIP Server (i.e. GrandStream UCM6102)

Information needed:

IP address of the SIP server

Extension number for the Door Controller

SIP password for the extension

Ring Group or Extension number the Door Station will call

4+ digit number to be entered to unlock the door (if applicable)

Steps

1. Download the search program to find the Door Controller on the network
 - a. http://logenex.com/productpdf/TELEPORT/TP_search.exe

2. Run TP_search.exe
3. Enter the IP address found in the previous step in your internet browser:
 - a. At this point you should see an image from the camera
 - b. If no image appears, verify that you have the video plug-in for your browser
4. Select “Configuration” and login to the Door Controller
 - a. Login: Admin
 - b. Pass: Admin

From the menu options on the left select

- a. Basic Settings
 - a. Set your time zone and the controller time
 - b. “Save” before leaving screen
- b. SIP
 - a. Enter Under SIP Settings
 - i. Account Name For reference only, any name
 - ii. SIP Server IP Address from GrandStream
 - iii. Outbound Proxy IP Address from GrandStream
 - iv. SIP User ID Extension Number of Door Station
 - v. Authenticate ID Extension Number of Door Station
 - vi. Authenticate Password Password entered in SIP server
 - vii. <Skip Tp>
 - viii. Local SIP Port port of SIP server
 - ix. Local RTP Port port of SIP server
 - x. “SAVE”
 - b. Enter Under SIP Open Door Settings (if applicable)
 - i. Enable SIP Open Door check Yes
 - ii. Key to Open Door 4+ Digit Code to open door
 - iii. Delay Lock Time (second) 5
 - iv. “SAVE”
 - c. Enter Under Phone List
 - i. Phone List Ring Group Number/Extension
 - ii. Remark Name For reference only, any name
 - iii. “ADD”

Reboot the System...

From the Menus Select

- a. Advance Settings
 - a. Maintenance
 - i. Restart

Posted by: [Steve Hoh](#) - Thu, Jun 2, 2016 at 12:10 PM. This article has been viewed 13706 times.

Online URL: <http://worthingtondistribution.com/kb/article.php?id=22>